



CONGRATULATIONS ON YOUR OAKO DESK!

THIS DESK IS UNIQUE..THE OAK TEXTURE,
COLOUR AND THE WAY IT LOOKS CAN ONLY BE
PRODUCED ONCE, AND NO ONE ELSE WILL
HAVE A DESK LIKE THIS, ONLY YOU!

The desk has arrived, what now?
This box is a gift from us to you!
It will guide you through on how to set up your OAKO desk
and take care of it. Are you ready for more comfortable and
healthier workspace?

LET'S SET IT UP!

HOW TO APPLY OAKO's WOOD OIL

OAKO's height-adjustable desks are made from natural oak, it is a hardwood that has been used to make furniture for hundreds of years, and as a hardwood, it will last for a lifetime if you take some simple steps to care for it.

That is why we are providing every desk with a "care package" that will help your desk to last a lifetime!

YOU WILL NEED:

- OAKO wood oil
- Soft cloth

INSTRUCTIONS:

*Pro tip: Warm the oil by placing the bottle in hot tap water before applying to the countertop.

1. Wipe down the countertop to make sure its crumb- and dirt free.
2. Saturate the cloth with the OAKO's wood oil and wipe onto the wood surface, making sure to cover any dry areas and working in the direction of the grain.
3. Let the polish soak in for about 20 minutes before wiping off any excess.
4. Let the oiled surface to dry completely about 2-3 hours (depending on the rooms temperature and humidity).
5. Wash the cloth in soapwater and let it dry, so it can be reused.
6. Buff the oiled surface with a clean and dry cloth.

ASSEMBLING MANUAL

SCAN THE QR CODE TO ACCESS ASSEMBLING VIDEO

OR VISIT: www.youtube.com/watch?v=6tWXABxk7ww



TO SET UP YOUR OAKO DESK, PLEASE FOLLOW THE INSTRUCTIONS!

!!!WARNING!!!

DO NOT connect the power supply to your desk until it is entirely assembled (see no.6)

IN THE BOX YOU WILL FIND:

x 20 screws



(A)

control box



(B)

hand control



(C)

x 4 feet screws



(D)



x 1



x 1



x 1



x 2




x 2


ASSEMBLING MANUAL

(I) STEP ONE:


1. Open the box
2. Remove cartons and foam

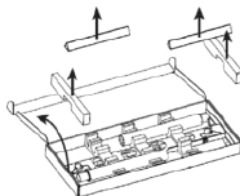


(II) STEP TWO:

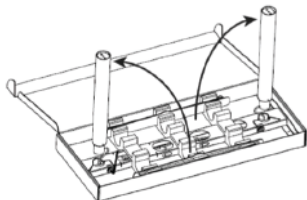

3. Unscrew the SIDE FRAME screws
4. Place the columns in correct position
5. Before inserting each of the columns into the SIDE FRAME, pull the cables through
6. Insert each of the columns and tighten the side screws
7. Attach both feet to the columns and tighten them with screws (D)

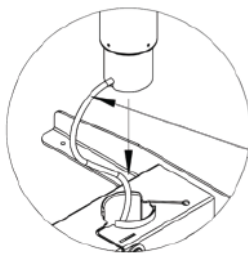

!!!WARNING!!!
Be careful not to damage the cord,
when the column is inserted.

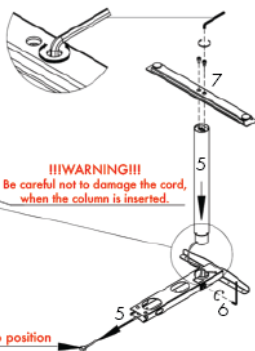


Be sure to pull out cord, while inserting the column into position


ASSEMBLING MANUAL

(III) STEP THREE:

8. Move the entire frame with column and feet to the desk surface
9. Adjust the frame to the center and fasten it using X 16 (A) screws
10. Screw the control box (B) and hand control (C) to the desk

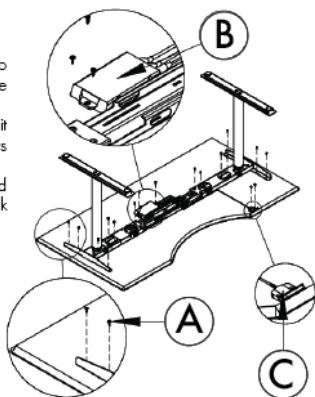


(IV) STEP FOUR:

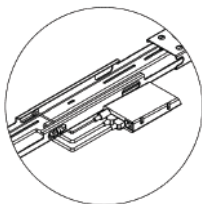

11. Connect all cables to the control box in the correct connectors

(V) STEP FIVE:

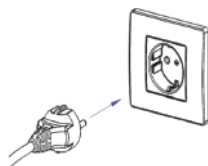

12. Once the desk is in the right position, connect the power cable and calibrate it. (check calibration instructions)

ASSEMBLING MANUAL

CALIBRATION:

- a. Hold down the "DOWN ARROW" button until the frame is fully down and goes slightly up.
- b. Wait for 10 seconds and the desk is now ready for use.
- c. After resetting the desk, run the desk all the way up and hereafter down to make sure the desk is running properly. If the desk is not running properly, try resetting your desk again (see a).


SPECIAL PROGRAMMING OF OAKO SIT/STAND DESK

1. Program your desk to your desired highest level *:
 - a. Run the desk all the way up and then down to the desired max height.
 - b. Hold both arrow buttons down for 10 seconds until you hear 2 clicks. The desk is now programmed to your desired max height.
 - c. If you want to reset the original maximum height (to factory setting), run the desk more than halfway up and hold down both arrow buttons min. 10 seconds until you hear a click.
2. Program your desk to your desired lowest level **:
 - a. Run the desk all the way down and then up to the desired min. height.
 - b. Hold both arrow buttons for 10 seconds until you hear 2 clicks. The desk is now programmed to the desired min. height.
 - c. If you want to reset the original minimum height (to factory settings), run the desk more than halfway down and hold both buttons min. 10 seconds until you hear a click.

NOTE!

* The maximum height must be higher than half the extension, ie. if the desk has an extension of eg. 72-122 cm, you must drive the desk higher than 97 cm.

** The minimum height must be lower than half the extension, ie. If the desk has an extension of, for example, 66-132 cm, you must drive the desk further than 99 cm.

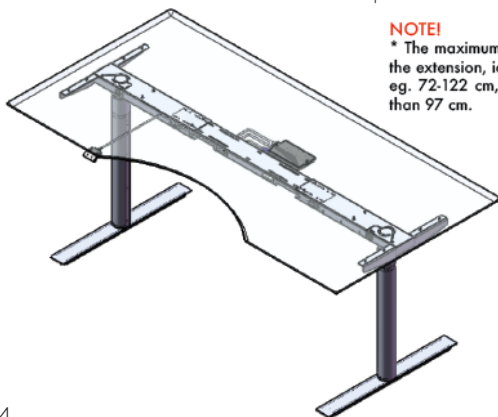



WE HOPE YOU ARE SATISFIED WITH YOUR NEW OAKO DESK!

TO IMPROVE THE SATISFACTION OF OUR CUSTOMERS, WE
HAVE PARTNERED WITH THE ONLINE REVIEW COMMUNITY,
TRUSTPILOT, TO COLLECT YOUR FEEDBACK.



[WWW.TRUSTPILOT.COM/REVIEW/OAKODENMARK.DK](https://www.trustpilot.com/review/oakodenmark.dk)

PLEASE LEAVE A REVIEW OF YOUR EXPERIENCE WITH OAKO
DENMARK ON THE PLATFORM YOU HAVE BOUGHT YOUR
DESK AND ON TRUSTPILOT.

BEST REGARDS

